

CLEAR COMFORT: Quick Guide



Cartridge Exchange for the CCW100 & CCW50



ACTION NEEDED BEFORE PROCEEDING

Please return your old Cartridge for recycling using the box & prepaid label included with your new Cartridge in **180 days** of receiving it. If you ordered a Sustainable Cartridge, you'll get your Core Deposit back too! Learn more at: clearcomfort.com/cartridge-faq




The only Clear Comfort AOP system maintenance you need is a 5-minute Cartridge Exchange after each year of use. When the **yellow** or **red** LED lights up, it's time for an exchange.


To see our video tutorial, scan or visit: clearcomfort.com/video-cartridge



1. Turn off & disconnect power to system.

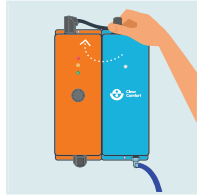


2. Rotate the cable base on the Cartridge Unit a quarter turn & gently pull up.

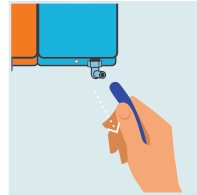


3. Remove Air Tubing from the Cartridge Unit.



4. Push the old Cartridge Unit up & separate it from the Control Unit.

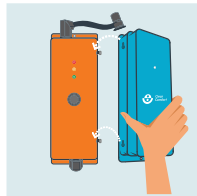

5. To attached the new Cartridge Unit, align the side keyed brackets & push down.

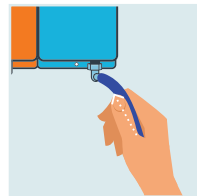

6. Reconnect Air Tubing to new Cartridge Unit.

7. Remove Flowmeter from old Cartridge Unit & reinstall on new one.



8. Align the Control Unit's cable base slot to the Cartridge Unit's top connector slot, gently push down & rotate a quarter turn.



9. Reconnect the system's power & turn it on.



10. For recycling, return your old Cartridge with the prepaid label & box included with your new Cartridge.

☎ 303.872.4477

✉ support@clearcomfort.com

🌐 clearcomfort.com/help



Help us help the planet.

Please return your old Cartridge for recycling
using the box & included prepaid label.

Ordered a Sustainable Cartridge Exchange?

Get your Core Deposit back when you return
your old Cartridge in **180 days** of
receiving your new one!*



Clear
Comfort

Thank you for helping
us recycle!



Have questions? Learn more at:
clearcomfort.com/cartridge-faq

*Terms Apply. Core Deposit refunds only apply to Sustainable Cartridge Exchange
orders placed with Clear Comfort.